

**Warning! Never use vinegar as a descaling agent.** You can use any commercially available non-toxic, non-harmful descaling product for coffee machines. We recommend using a Saeco descaling agent.

Descaling is necessary every 3-4 months, when there is a reduction in the water capacity. The machine must be on; it automatically controls the distribution of the descaling solution.



When the machine needs descaling, the indicator light will flash.

Remove the cartridge filter carefully.

Fill the water tank with the descaling solution.

Place a large receptacle beneath the steam tube.

Press the button for 5 seconds.



Open the knob. The descaling process starts.

The solution will be discharged at intervals.

The lights will flash to signal when descaling is over.

Close the knob. Remove the container.

Rinse out the tank and fill it with fresh drinking water.



Place a large receptacle beneath the steam tube.

Open the knob to rinse.

When no water is left, turn the knob to close the valve.

Remove the container.

**Warning!** If the descaling cycle is interrupted, the water tank and internal machine circuits must be rinsed.

When descaling is over, fit the cartridge filter back in place.