

**Warning! Never use vinegar as a descaling agent.** You can use any commercially available non-toxic, non-harmful descaling product for coffee machines. We recommend using a Saeco descaling agent.

Descaling is necessary every 3-4 months, when there is a reduction in the water capacity. The machine must be on; it automatically controls the distribution of the descaling solution.



When the machine gives the signal, press the button x 5 seconds.

Remove the cartridge filter.

Fill the water tank with the descaling solution.

Place a large receptacle beneath the steam tube.

Turn the knob to open the valve.

The machine will start descaling.



When the descaling cycle is completed, close the knob.

Rinse out the tank and fill it with fresh drinking water.

Press the button to confirm the rinse cycle.

Open the knob. The machine will start rinsing.

When the rinse cycle is completed, close the knob and load the circuit.



**INTERRUPTION**

**Warning!** If the descaling cycle is interrupted by switching off the machine, it will automatically resume when the machine is switched back on.

When descaling is over, fit the cartridge filter back in place.

The descaling cycle can be cut short by closing the knob.

Press the button.

Rinse out the tank and fill it with fresh drinking water.

Press the button to confirm the rinse cycle and proceed normally.